 


# Panasonic

## Stereo Radio Cassette Player RQ-V65/RQ-V75

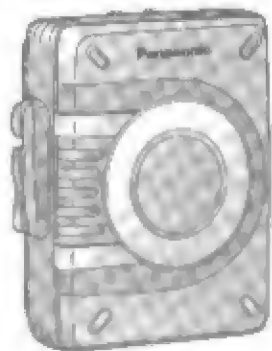

### Operating Instructions

Before connecting, handling or adjusting this product, please read these instructions completely. Please save this manual.



Before operation, be sure to remove the protection slider of the head.

#### CAUTION:

This device complies with Part 15 of the FCC Rules. Operation is subject to the condition that this device does not cause harmful interference. Any unauthorized changes or modifications to this equipment would void the user's authority to operate this device.

Panasonic Consumer Electronics Company, Division of Matsushita Electric Corporation of America  
One Panasonic Way Secaucus, New Jersey 07094  
<http://www.panasonic.com>

Panasonic Sales Company, Division of Matsushita Electric of Puerto Rico, Inc. ("PSC")  
Ave. 65 de Independencia, Matt. 9-5 San Gabriel Industrial Park, Carolina, Puerto Rico 00985

RQTT0025-1P  
P0199T1039 1D

### Supplied Accessories

Stereo headphones (REF. V70SP-KY)  
Belt clip (RFX10002-K)

- To order accessories contact 1-800-332-5968 or web site (<http://www.panasonic.com>).
- Use numbers indicated in parentheses when asking for replacement parts.

#### Attaching the belt clip



 
### Technical Specifications

|                             |  |
|-----------------------------|--|
| Radio frequency range:      |  |
| FM                          | 88.0-108.0 MHz                                   |
| AM                          | 530-1700 kHz                                     |
| Frequency range:            | AM: 1600 Hz (Normal)                             |
| Tape speed:                 | 4.8 cm/s (1/2 ips)                               |
| Jack:                       |  |
| Output:                     | HEADPHONES                                       |
| Power requirement:          | Battery: DC 3 V (Two R6/LR6, AA, UM-3 batteries) |
| Dimensions (W x H x D):     | 87 mm (3 1/2") x 44 mm (1 3/4") x 16 mm (5/8")   |
| Weight (without batteries): | 106 g (3.8 oz.)                                  |
| Play time:                  |  |

When used at 70°C (158°F) temperature and on a standard music without Panasonic alkaline dry cell batteries. Approx. 10 hours.  
Radio: Approx. 10 hours.  
The play time may be less depending on the operating conditions.


Note:  
Small amounts of dust may be discharged when the cassette and headphones are approached.

# 1 INSTALL BATTERIES.

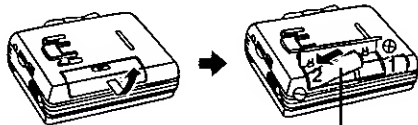

Two R6/LR6, AA, UM-3  
(not included) batteries

# 2 CONNECT THE HEADPHONES.

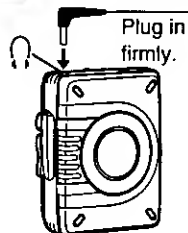 

## Basic Operation

### ■ Tape playback

| Operation                 | Button  |
|---------------------------|---|
| To stop                   | <b>STOP</b>   |
| To fast forward or rewind | <b>FF</b> (fast forward)<br>or<br><b>REW</b> (rewind) |

### Type of tape which can be used

|                        |     |
|------------------------|-----|
| Normal position/TYPE I | Yes |
| High position/TYPE II  | No  |
| Metal position/TYPE IV | No  |

This unit will not be able to do full justice to characteristics of high and metal position tapes even if they are played back.

### ■ Radio reception

| Operation | Selector        |
|-----------|-----------------|
| To stop   | <b>TAPE OFF</b> |

 
 
When selecting the band  
Set the **BAND** selector to the desired radio band.

# 3

## TAPE



### ① INSERT A CASSETTE.

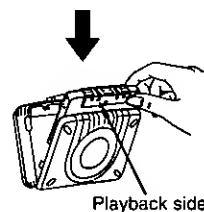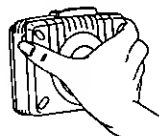


### ② SET THE SELECTOR.




## RADIO



 
### ① SET THE SELECTOR.

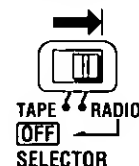

### ② SELECT THE BAND.

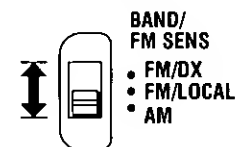 


### ③ TUNE THE STATION.

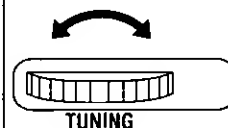 

### ④ ADJUST THE VOLUME.


 
### ③ PRESS PLAY.



### ④ ADJUST THE VOLUME.



### CHANGING THE BASS.



## BEFORE CALLING



Before requesting service for this unit, check the chart below for a possible cause of the problem you are experiencing. Some simple checks or a minor adjustment on your part may eliminate the problem and restore proper operation.

If you are in doubt about some of the check points, or if the remedies indicated in the chart do not solve the problem, refer to the directory of Authorized Service Centers (enclosed with this unit) to locate a convenient service center, or consult your dealer for instructions.

(In U.S.A. consult PASC Authorized Servicenters for detailed instructions or call 1-800-211-7262 for the address of an authorized factory servicenter.)

## Problem → Checkpoint

No tape operations in spite of radio operations. → Are the batteries worn?

No radio operations. → Is **SELECTOR** set to **TAPE OFF**?

No operations. → Have the batteries been installed with their polarities (⊕, ⊖) reversed?

• No sounds.  
• A gritty noise is heard. → • Is the headphones plug firmly connected to the jack?  
• Is the plug dirty?

PANASONIC CONSUMER ELECTRONICS  
COMPANY, DIVISION OF MATSUSHITA  
ELECTRIC CORPORATION OF AMERICA  
One Panasonic Way  
Secaucus, New Jersey 07094

## Panasonic Limited Warranty

Panasonic Consumer Electronics Company or Panasonic Sales Company (collectively referred to as "The warrantor") will repair this product with new or refurbished parts, free of charge, in the U.S.A. or Puerto Rico from the date of original purchase in the event of a defect in materials or workmanship as follows:

**For one (1) year—Radio, Clock Radio, Radio with Tape Player or Recorder, Speaker**

**For ten (10) days—Batteries—**(when applicable)—New rechargeable batteries in exchange for defective rechargeable batteries. Non-rechargeable batteries are not warranted.

For assistance in the U.S.A. in obtaining repairs contact:

**Panasonic Services Company**  
**Panasonic PLUS Department**  
20421 84th Avenue South  
Kent, WA 98032  
Phone: 1-800-833-9626  
FAX: 1-800-237-9080

If repair is needed, during the warranty period the purchaser will be required to furnish a sales receipt/proof of purchase indicating date of purchase.

Also, the purchaser will be responsible for shipping the unit to the above address. This warranty is extended only to the original purchaser.

For assistance in Puerto Rico contact, Panasonic Sales Company at the address or telephone number above.

PANASONIC SALES COMPANY, DIVISION  
OF MATSUSHITA ELECTRIC  
OF PUERTO RICO, INC. ("PSC")  
Ave. 65 de Infantería, Km. 9.5  
San Gabriel Industrial Park  
Carolina, Puerto Rico 00985  
Tel. (809) 750-4300  
FAX. (809) 768-2910

This warranty only covers failures due to defects in materials or workmanship which occur during normal use and does not cover damage which occurs in shipment or failures which are caused by products not supplied by the warrantor or failures which result from accident, misuse, abuse, neglect, mishandling, misapplication, faulty installation, set-up adjustments, improper maintenance, alteration, improper antenna, inadequate signal pick-up, maladjustment of consumer controls, modification, line power surge, or commercial use of the product, or damage that is attributable to acts of God, or service by anyone other than a PASC Factory Servicenter.

### LIMITS AND EXCLUSIONS

There are no express warranties except as listed above.

THE WARRANTOR SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT, OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING WITHOUT LIMITATION, DAMAGE TO TAPES, RECORDS OR DISCS. ALL EXPRESS AND IMPLIED WARRANTIES, INCLUDING THE WARRANTIES OF MERCHANTABILITY, ARE LIMITED TO THE APPLICABLE WARRANTY PERIOD SET FORTH ABOVE. Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the above exclusions or limitations may not apply to you.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

If a problem with this product develops during or after the warranty period, you may contact your dealer or Panasonic PLUS Department. If the problem is not handled to your satisfaction, then write to the Customer Satisfaction Center at the company address above or call toll free 1-800-211-7262.

### If you ship the product

Carefully pack and send it prepaid, adequately insured and preferably in the original carton. Attach a letter, detailing the complaint, to the outside of the carton.

*Do NOT send the product to the Executive or Regional Sales offices. They are NOT equipped to make repairs.*

### Customer's Record

|                              |                           |
|------------------------------|---------------------------|
| Model<br>No. _____           | Dealer's<br>Name _____    |
| Serial<br>No. _____          | _____                     |
| or<br>Code<br>No. _____      | Dealer's<br>Address _____ |
| Date<br>of<br>Purchase _____ |                           |

## TAPE



### Auto stop

When the tape reaches the end of playback, the automatic stop system will release **PLAY** and turn off the unit.

### Notes:

- Do not open the cassette compartment cover during tape operation.
- Between functions (during play, fast forward or rewind), always press **STOP** first to avoid jamming the tape.

 
 
- When the tape reaches the end after fast forward or rewind, press **STOP** to release the button.
- If you set **SELECTOR** to **RADIO** to switch on the radio during tape operation, the button will not be released even though the motor has stopped. In this case, press **STOP** to release the button.

## RADIO




### To obtain good reception

#### FM:

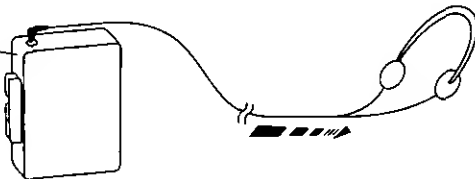

#### AM:

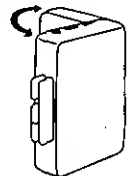 

#### XBS

Boosts the low frequency range.

- If sound distortion occurs, turn down the volume.

## BASS



## BATTERIES



- Insert the batteries observing the correct polarities to avoid leakage and damage to this unit.
- Do not mix old and new batteries, or batteries of different types (manganese, alkaline, etc.).
- Remove all the batteries if the set will not be used for a long period of time.
- If rechargeable batteries are to be used, rechargeable batteries manufactured by Panasonic are recommended.

### Battery life

- When the batteries are weak, the tape sound will become distorted, and the volume will decrease.

## CAUTION



- Avoid using or placing this unit near sources of heat. Do not leave it in an automobile exposed to direct sunlight for a long period of time with doors and windows closed.

- To avoid product damage, do not expose this product to rain, water or other liquids.

### Listening caution



Do not play your headphones or earphones at a high volume. Hearing experts advise against continuous extended play.

If you experience a ringing in your ears, reduce volume or discontinue use.

Do not use while operating a motorized vehicle. It may create a traffic hazard and is illegal in many areas.

You should use extreme caution or temporarily discontinue use in potentially hazardous situations.

Even if your headphones or earphones is an open-air type designed to let you hear outside sounds, don't turn up the volume so high that you can't hear what's around you.

Sound can be deceiving. Over time your hearing "comfort level" adapts to higher volumes of sound. So what sounds "normal" can actually be loud and harmful to your hearing.

Guard against this by setting your equipment at a safe level BEFORE your hearing adapts.

To establish a safe level:

- Start your volume control at a low setting.
- Slowly increase the sound until you can hear it comfortably and clearly, and without distortion.

 
Once you have established a comfortable sound level:

- Set the dial and leave it there.

## MAINTENANCE



Get into the habit of cleaning the head assembly (after every 10 hours or so) with a cotton swab dampened with a little alcohol.

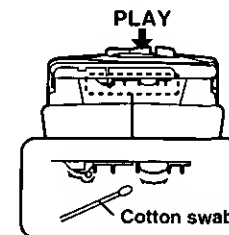

### Product Service

Do not attempt to remove the cover(s) or repair the unit yourself. Refer servicing to qualified personnel only.

### Product information

For product service, product information or assistance with product operation, refer to the servicenter directory.

### User memo:

DATE OF PURCHASE \_\_\_\_\_  
 DEALER NAME \_\_\_\_\_  
 DEALER ADDRESS \_\_\_\_\_  
 TELEPHONE NUMBER \_\_\_\_\_